

Slit Glass & Charge Rod Cleaning for **55 series machines

The front of your machine



1: Open the front panel



2: Remove the Waste Bottle



3: Each drum (4=YMCK) looks like this



4: Gently pull on the Green plastic tab



4a: Pull tab out to full extent and push it back in
Repeat this for each colour drum (YMCK)



5: Release the green levers as shown below



6: Remove the "wand" from inside front cover



7: Insert "Wand" into the opening in drum



8: Push "wand" all the way in pull it out
Repeat this for each colour Drum (YMCK)



"Wand" should be this way up



You can repeat these steps a couple of times and that should resolve the problem
If it does not resolve the issue, please call us and we will come out to investigate.