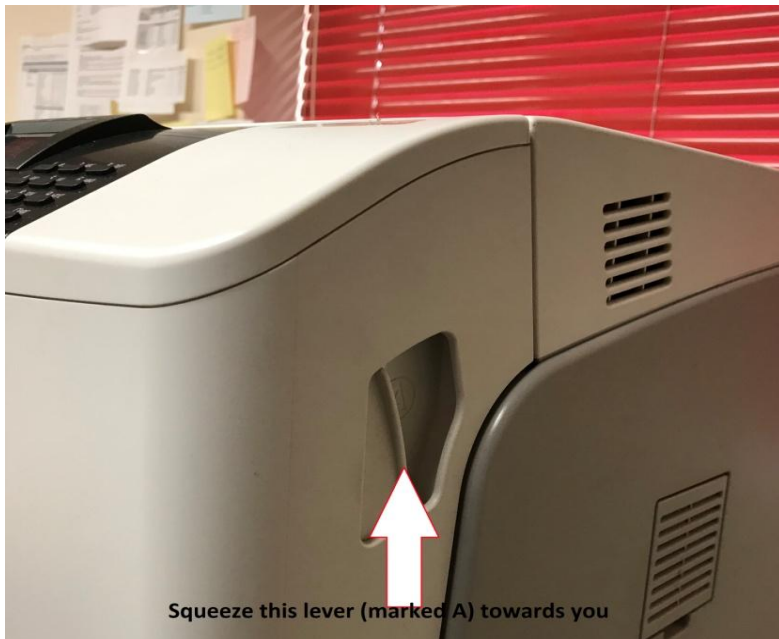# SP C430 / SP C431 / SP C440 Fuser Replacement
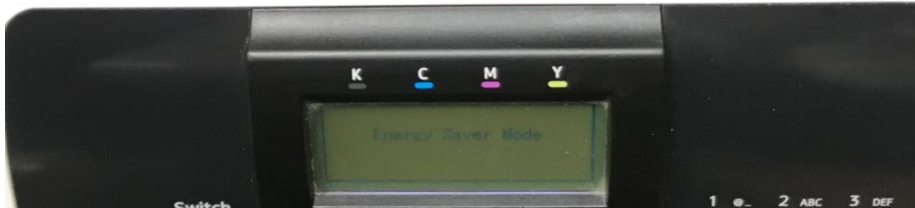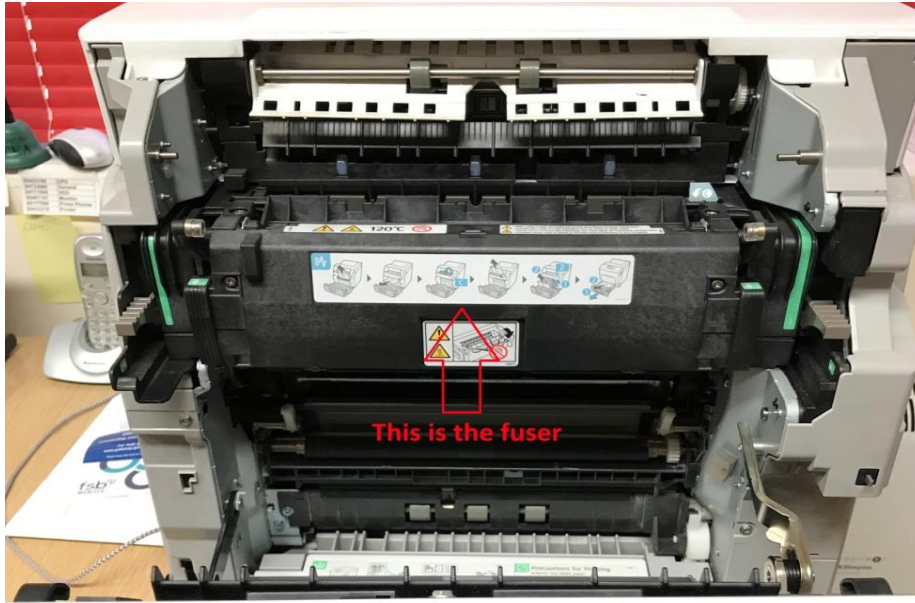
1: Open front cover by pressing these two locks towards you/the front

Squeeze this lever (marked A) towards the front
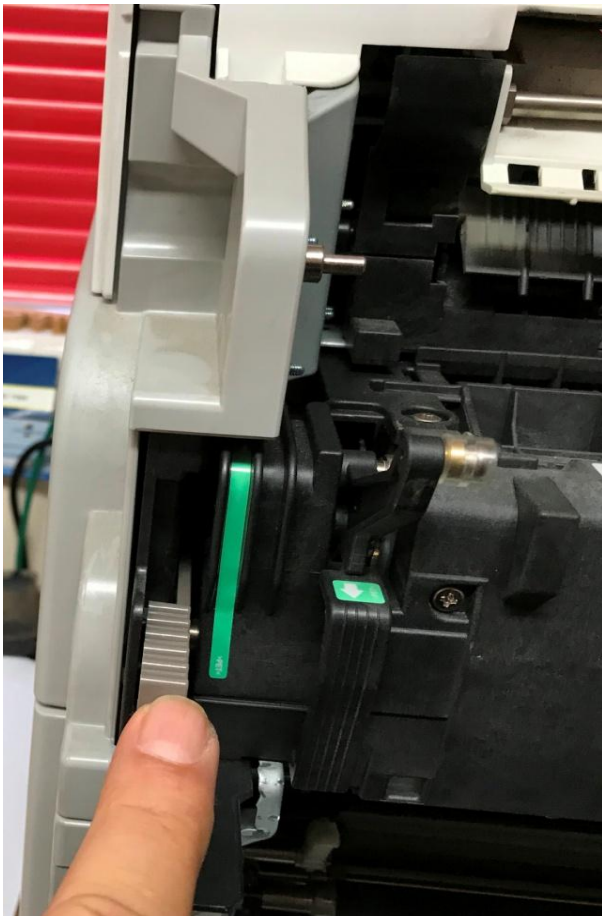

Squeeze this lever (marked A) towards you

SP C430 / SP C431 / SP C440 Fuser Replacement

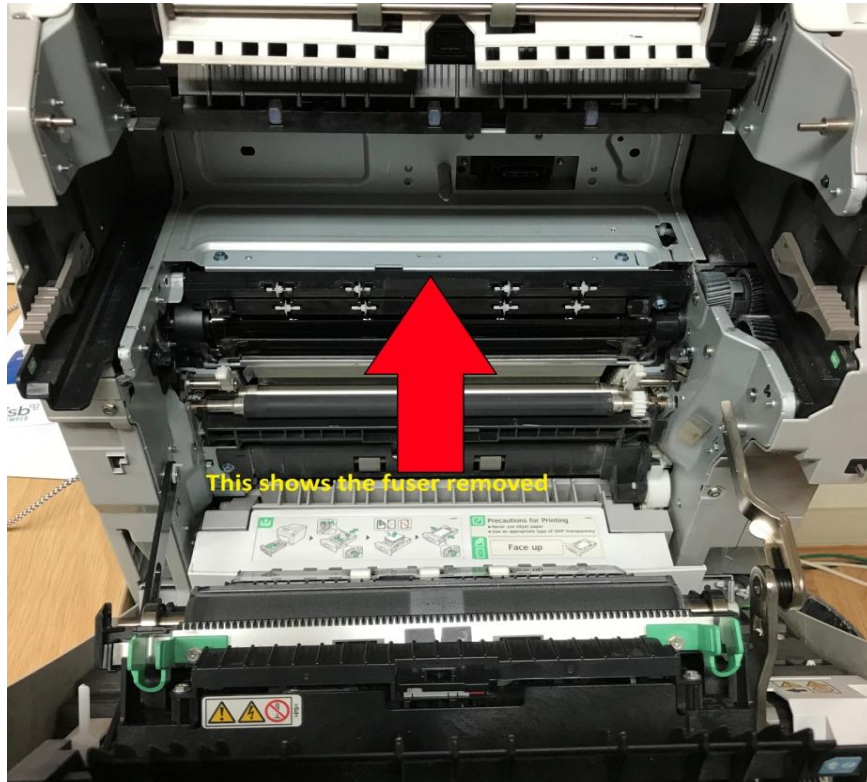2: This is the fuser

This is the fuser

3: To release the fuser you need to push these two levers UP

SP C430 / SP C431 / SP C440 Fuser Replacement

4: Slide fuser towards you and remove…it will now look like this

5: Insert new fuser and ensure that you lock it into place by pushing the two levers down..now close the front cover and all should be OK